Hotpoint Ariston

LBF 31 TK/HA

Bulaşık Makinası

Türkçe Kullanma ve Tanıtma Kılavuzu

Kurulum

TR

⚠ İleride kullanılması açısından bu talimat kitabını güvenli bir yerde muhafaza edin. Cihaz satıldı, başka birine verildi ya da hareket ettirildiyse yeni kullanıcının da bu manüelde belirtilen önerilerden yararlanabilmesi için manüelin de makine ile birlikte muhafaza edildiğinden emin olun.

⚠ Lütfen bu talimat kitabını dikkatle okuyun: Cihazın güvenli bir şekilde kurulumuna, kullanımına ve bakımına dair önemli bilgiler içermektedir.

⚠ Makinenin yeri değiştirilmek istenirse makineyi dik konumda tutun; kesinlikle gerekiyor ise makine arka kısmı üzerine eğilebilir.

Yerleştirme ve Seviyelendirme

1. Cihazı, ambalajından tamamıyla çıkarın ve taşıma sırasında hasar görmediğinden emin olmak için kontrol edin.
Hasar görmüş ise perakende satıcınız ile görüşün ve kurulum işlemini devam ettirmeyin.

2. Yanlarının ve arka panelinin bitişiğinde bulunan dolaplar ya da duvar ile temas edebilmesi için bulaşık makinesini yerine yerleştirerek kontrol edin. Bu cihaz, aynı zamanda tek bir tezgah altına da yerleştirilebilir *(*Kurulum bilgileri sayfasına bakınız*).

3. Bulaşık makinesini, düz ve dayanıklı bir yüzey üzerine yerleştirin. Yüzey düz değil ise cihazın ön ayağı, makine yatay bir pozisyona gelene kadar ayarlanabilir. Cihaz doğru bir şekilde seviyelendirildiyse daha sağlam olacak ve çalışması sırasında titreşim ya da gürültü yaratmayacak veya hareket etmeyecektir.

4*. Arka ayağın yüksekliğinin ayarlanması için 8 mm açıklıklı bir altıgen anahtar kullanmak suretiyle bulaşık makinesinin önünde alt kısmın merkezinde bulunan kırmızı altıgen burç yatağını döndürün. Yüksekliği arttırmak için anahtarı saat yönünde, yüksekliği azaltmak için saat yönünün tersine döndürün. *(dokümana eklenen Yapım talimatları sayfasına bakınız)*

Su ve elektrik kaynaklarının bağlanması

⚠ Su ve elektrik kaynaklarının bağlanması, nitelikli bir teknisyen tarafından gerçekleştirilmelidir.

⚠ Bulaşık makinesi, su hortumlarının ya da elektrik kaynağı kablolarının üstüne yerleştirilmemelidir.

⚠ Cihaz, su tesisatına yeni hortumlar kullanılarak bağlanmalıdır.
Eski hortumları kullanmayın.

Su giriş (A) ve çıkış (B) hortumları ve elektrik kaynağı kablosu, mümkün olan en iyi kurulumun elde edilmesi amacıyla sağa ya da sola doğru yerleştirilebilir. (*bknz şekil*)

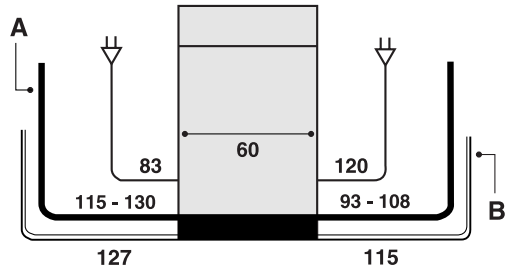

Su giriş hortumunun bağlanması

- Uygun bir soğuk su bağlantı noktasına: Hortumu bağlamadan önce, su içinde bulunması mümkün olan partiküllerin cihazı tıkamaması için hortum tamamıyla temizlenene kadar su akıtın; Bu işlemi gerçekleştirdikten sonra giriş hortumunu, musluğa ¾'lük bir gaz vidası dişli bağlantısıyla vidalayın.
- Uygun bir sıcak su bağlantı noktasına: Bulaşık makineniz, sıcaklığı 60°C'yi geçmeyecek şekilde elektrik kaynağından gelen sıcak su ile beslenebilir (radyatörlü bir merkezi ısıtma sisteminiz varsa). Soğuk su kaynağının bağlanması konusunda belirtilen şekilde hortumu musluğa vidalayın.

⚠ Giriş hortumu yeteri kadar uzun değil ise konusunda uzman bir mağazaya ya da yetkili bir teknisyene başvurun. (*bknz Destek*)

⚠ Su basıncı, Teknik bilgi tablosunda verilen değer aralığında olmalıdır. (*bknz bitişik bilgi*)

⚠ Hortum kıvrılmamalı ya da ezilmemelidir.

Su basmalarına karşı koruma

Su basması olaylarının ortaya çıkmayacağından emin olmak için bulaşık makinesi:
- Cihazın içinde oluşabilecek arıza veya sızıntılar halinde su beslemesini bloke eden özel bir sistem ile yapılandırılmalıdır.

Bazı modellerde, *New Aqua Stop** (Yeni Su Durdurma) olarak bilinen ve besleme hortumunun yırtılması durumunda bile su basmalarına karşı koruma sağlayan destek güvenlik cihazları da bulunmaktadır.

UYARI: TEHLİKELİ VOLTAJ!

Su giriş borusu iletken elektriksel parçalar içerdiği için her ne şart altında olursa olsun kesilmemelidir.

* Sadece seçilen modellerde mevcuttur.

TR

Su çıkış hortumunun bağlanması

Çıkış borusunu (boruyu bükmeden) minimum çapı 4 cm olan bir drenaj borusuna bağlayın. Alternatif olarak bir küvet ya da lavabo içine yatırın; hortumun boşta kalan ucu suya batırılmış durumda olmamalıdır.

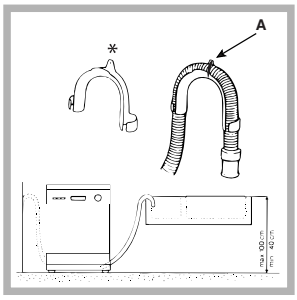

Özel plastik dirsek*, en iyi düzenin bulunmasını daha kolay bir hale getirir. Çıkış borusunun hareket etmesini ve kirli suyu dışarı vermesini engellemek için dirseği duvara sağlam bir şekilde sabitleyin.
Hortumun A harfi ile işaretlenmiş kısmı, yerden yaklaşık 40 ila 100 cm yukarıda olmalıdır (*bknz şekil*)

⚠ Boru eklentilerinin kullanılmamasını tavsiye ediyoruz.

Elektrik bağlantısı

Fişi elektrik prizine takmadan önce aşağıdaki hususların sağlandığından emin olun:

- Priz topraklanmış olup uygulanan tüm yönetmeliklere uygundur.
- Priz, kapağın iç kısmında bulunan bilgi plakası üzerinde belirtilen cihazın maksimum yüküne dayanacak güçtedir. (*Cihazın Tanımı başlıklı bölümü inceleyiniz*)
- Güç kaynağı voltajı, kapağın iç kısmında bulunan bilgi plakasının üzerinde belirtilen değerler içerisinde değişir.
- Priz, cihazın fişi ile uyumludur. Yukarıdaki şartlar sağlanmıyorsa prizin değiştirilmesi için yetkili bir teknisyene başvurun (*bknz Destek*); uzatma kabloları ya da çoklu priz kullanmayın.

⚠ Cihazın kurulumu tamamlandıktan sonra güç kaynağı kablosu ve elektrik prizi kolaylıkla ulaşılabilir bir yerde olmalıdır.

⚠ Kablo kıvrılmamalı ya da ezilmemelidir.

⚠ Güç kaynağı kablosu zarar görmüş ise tüm potansiyel tehlikelerin önlenmesi için kablo, imalatçı ya da Teknik Destek Servisi tarafından değiştirilmelidir. *(Bknz "Destek")*

⚠ Bu kurallara uyulmaması durumunda ortaya çıkabilecek olaylardan Şirketimiz sorumlu tutulamayacaktır.

Yoğuşma önleyici bant*

Bulaşık makinesini kurduktan sonra kapağı açın ve bulaşık makinenizi yoğuşma nedeniyle oluşan muhtemel sorunlardan korumak için yapışkanlı bandı ahşap rafın altına yapıştırın.

İlk yıkama devri hakkında öneri

Cihazın kurulumu tamamlandıktan sonra ve ilk yıkama devrini başlatmadan hemen önce tuz dağıtıcısını tamamıyla su ile doldurun ve ancak bundan sonra yaklaşık 1 kg kadar tuz ekleyin (*Duruluma maddesi ve işlenmiş tuz başlıklı bölümü inceleyiniz*). Su dışarıya taşabilir: Bu normal bir durum olup sorun olarak değerlendirilmemelidir. Su sertliği değerini seçin (*Durulama maddesi ve işlenmiş tuz bağlıklı bölümü inceleyiniz*). Tuz, makinenin içine döküldükten sonra, YETERSİZ TUZ (LOW SALT)* göstergesi sönecektir.

⚠ Tuz bölmesi doldurulmazsa, sonuç olarak su yumuşatıcısı ve ısıtma bileşeni zarar görebilir.

Teknik bilgiler	
Boyutlar	Genişlik 60 cm. Yükseklik 85 cm. Derinlik 60 cm.
Kapasite	12 standart yer ayarı
Su şebeke basıncı	0.05 ÷ 1MPa (0.5 ÷ 10 bar) 4.3 psi - 145 psi
Güç kaynağı voltajı	Bilgi levhasına bakınız
Toplam absorbe edilen güç	Bilgi levhasına bakınız
Sigorta	Bilgi levhasına bakınız
CE 	Bu bulaşık makinesi aşağıdaki Avrupa Birliği Yönergelerine uygundur: -19/02/73 tarihli 73/23/EEC (Düşük Voltaj) ve sonraki değişiklikler -89/336/EEC of 03/05/89 (Elektromanyetik Uygunluk) ve sonraki değişiklikler; -97/17/CE (Etiketleme) -2002/96/EC

*Sadece seçilen modellerde mevcuttur.

Cihazın tanımı

TR

Genel görünüm

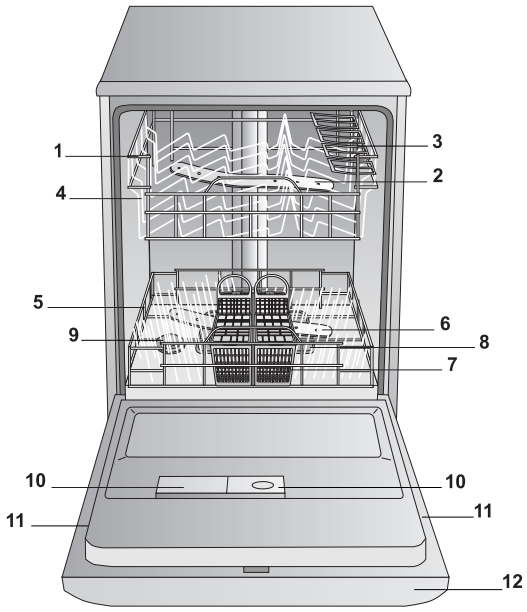

1. Üst Raf
2. Üst püskürtücü kol
3. Eğimli bölümler
4. Raf yüksekliği ayarlayıcısı
5. Alt raf
6. Alt püskürtücü kol
7. Çatal ve Bıçak Sepeti
8. Yıkama filtresi
9. Tuz dağıtıcı
10. Deterjan ve durulama maddesi dağıtıcıları
11. Bilgi plakası
12. Kontrol paneli***

Kontrol paneli

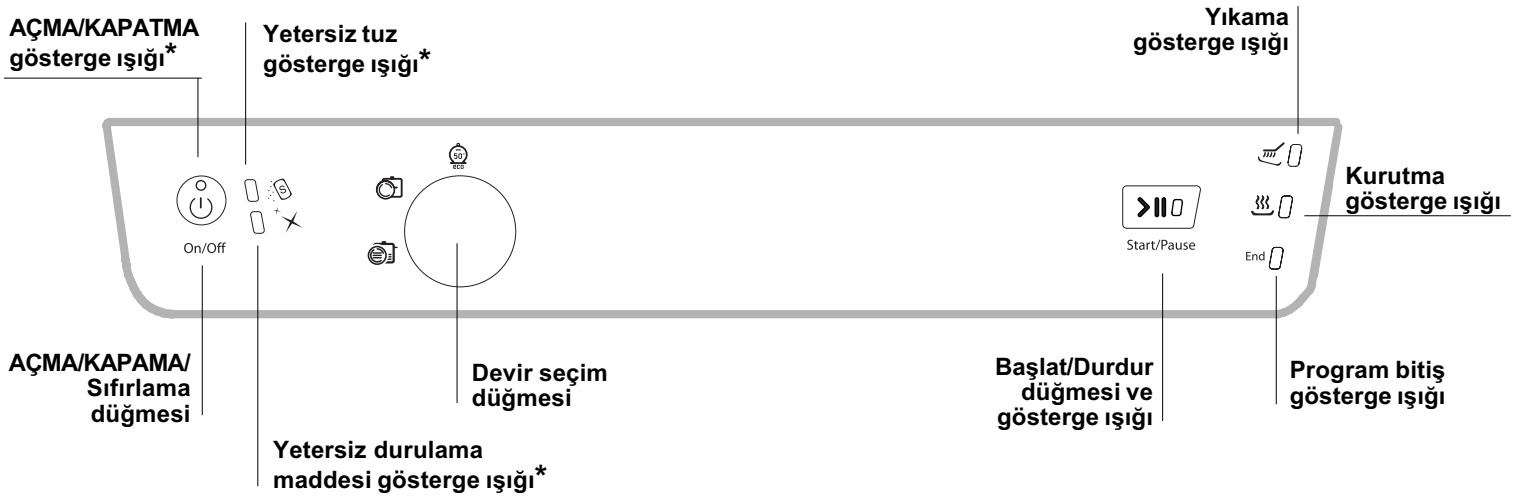

*** Sadece tamamıyla geliştirilmiş modellerde.
* Sadece seçilen modellerde mevcuttur.

Rafların yüklenmesi

Hotpoint ARISTON

TR

⚠ Rafları yüklemeden önce, çatal ve bıçaklar üzerinde kalan yemek artıklarını ve bardaklarda ve kupalarda kalan sıvıları temizleyin.
Cihazı yükledikten sonra püskürtücü kolların rahat bir şekilde dönebileceğinden emin olun.

Alt raf

Tavalar, kapaklar, tabaklar, salata kapları, çatal ve bıçaklar, vb *Yükleme örneklerinde gösterildiği şekilde alt rafa yerleştirilebilir.*
Tabaklar ve geniş kaplar, üst püskürtücü kolun dönüş hareketini engellemeden rafın yan kısımlarına yerleştirilmelidir.

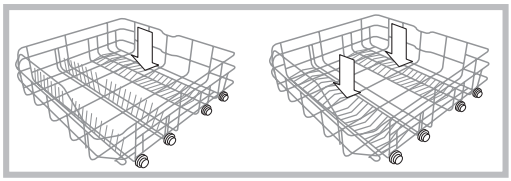

Bazı bulaşık makinesi modellerinde, tabaklar yerleştirilirken dikey pozisyona ve tavalar ve salata kaseleri yerleştirilirken yatay pozisyona getirilebilen eğimli bölümler* bulunmaktadır.

Çatal ve Bıçak Sepeti

Çatal ve bıçak sepetinin şekli, bulaşık makinesi modeline göre değişebilmektedir: Modüler, bütünsel ya da kaydırılabilir modellerden biri olabilir. Bütünsel sepetler, **sadece** alt rafın ön kısmına yerleştirilmelidir.
Modüler sepet, daha çok yarım yıkama yapılırken önerilen bir çözüm olarak (bu opsiyonun mevcut olduğu modellerde) iki ayrı parçaya ayrılabilir ve kaydırılabilir modellerde de mevcuttur (sabit ya da eğimli rafların arasında kaydırma suretiyle alt raf üzerinde istenen yere yerleştirilebilir).
- Her iki tip de, çatal ve bıçak sepetinin mümkün olan en iyi şekilde yerleştirilmesi için sökülebilir bir kayma sistemi ile donatılmıştır.

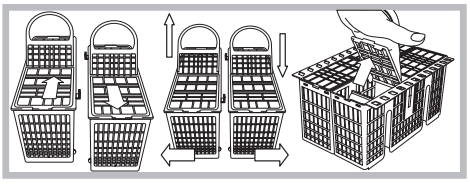

⚠ Bıçaklar ve keskin kenarlı diğer bulaşıklar, çatak ve bıçak sepetinin içine keskin kısımları alta gelecek şekilde ya da üst rafta bulunan eğimli kısımlar üzerine yatay olarak yerleştirilmelidir.

Çatal ve bıçak sepetinin yerleştirilmesi hakkında örnekler

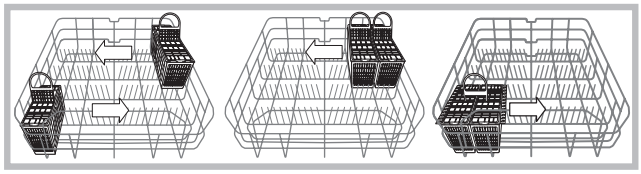

Üst Raf

Kırılgan ve hafif bulaşıkları bu rafa yerleştirin: Bardaklar, çay ve kahve bardakları, çay tabakları, küçük salata kaseleri, çok kirli olmayan küçük tencereler ve saplı tavalar, *Yükleme örnekleri* göz önünde bulundurularak yerleştirilmelidir.

- Kupalar ve kaplar: Bunları, eğimli bölmelere yerleştirin**.
- Uzun keskin bıçaklar ve servis takımı: Bunları, eğimli bölmelere yerleştirin**.

Üst rafın yüksekliğinin ayarlanması

Çatal ve bıçak sepetinin yerleştirilmesini kolaylaştırmak için üst raf, aşağıya ya da yukarı doğru hareket ettirilebilir.

⚠ Üst rafın yüksekliği, tercihen RAF BOŞKEN ayarlanmalıdır.

Rafı, ASLA sadece bir kenarından kaldırıp alçaltmayın.

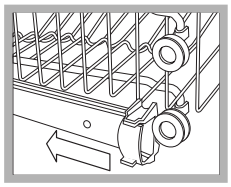

Sağ ve sol kılavuz ray kilitlerini açın ve rafı dışarı çekin; ihtiyacınıza göre aşağı ya da yukarıya yerleştirin, ön tekerlekler yerine yerleşene kadar kılavuz rayları boyunca itin ve kilitleri kapatın (*bknz şekil*).

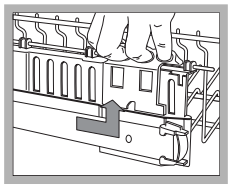

Şayet raf, **Dual Space tutacakları*** (*bknz şekil*) ile donatılmış ise üst rafı durma noktasına kadar çekin, rafın yanlarındaki tutacakları kavrayın ve isteğe göre yukarıya ya da aşağı doğru hareket ettirin ve yavaşça yerine girmesine yardımcı olun.

Üst rafın yüklenmesi hakkında örnekler

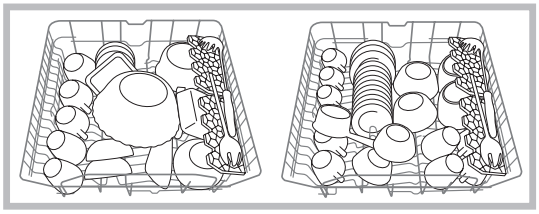

Alt rafın yüklenmesi hakkında örnekler

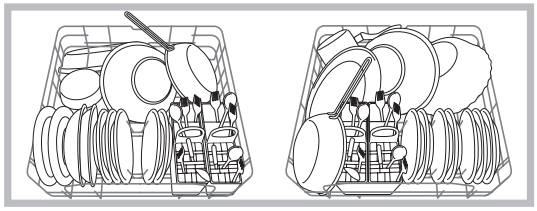

Bulaşık makinesinde yıkanmaması gereken bulaşıklar

- Ahşap parçalar, kulpları ahşap ya da boynuz şeklinde olan veya parçaları yapıştırılarak birleştirilmiş nesneler
- Alüminyum, bakır, pirinç, kalay ya da kurşundan yapılmış parçalar
- Isıya dayanıklı olmayan plastik materyallerden yapılmış parçalar
- Antik ya da elle boyanmış poselenler
- Antik gümüşler Diğer bir yandan, antik olmayan gümüşler de diğer metallere temas etmeyeceğinden emin olunduktan sonra hassas bir yıkama devri ile bulaşık makinesinde yıkanabilir.

⚠ Bulaşık makinenizin güvenliği için çatal ve bıçak sepetini kullanmanızı tavsiye ederiz.

* Sadece seçilen modellerde mevcuttur.
** Sayısı ve yeri değişiklik gösterebilir.

Başlangıç ve kullanım

TR

Bulaşık makinesinin çalıştırılması

1. Su musluğunu açın.
2. AÇMA/KAPAMA düğmesine basın: Birkaç saniye boyunca kontrol paneli üzerinde bulunan tüm gösterge ışıkları yanacaktır.
3. Kapağı açın ve yeterli miktarda deterjan dökün (*aşağıya bakınız*).
4. Rafları yükleyin (*Rafların yüklenmesi başlıklı bölümü inceleyiniz*) ve kapağı kapatın.
5. YIKAMA DEVRİ SEÇİMİ düğmesini saat yönünde döndürerek yıkama devrini seçin: Düğme üzerinde bulunan çizgiyi, istenilen yıkama devrini temsil eden sayı ya da sembol ile aynı hizaya getirin. BAŞLAT/DURDUR gösterge ışığı yanıp sönecektir.
6. Yıkama opsiyonlarını seçin* (*bitişikteki bilgiyi inceleyin*).
7. BAŞLAT düğmesine basarak yıkama devrini başlatın; gösterge ışığı yeşile dönüşecek ve sabit bir şekilde yanmaya devam edecektir. Yıkama devrinin başladığını bildirir yıkama fazına ilişkin gösterge ışığı yanacaktır.
8. Yıkama devrinin sonunda BİTTİ (END) gösterge ışığı yanacaktır (sabit yeşil ışık). AÇMA/KAPATMA düğmesine basarak cihazı kapatın, su vanasını kapatın ve makinenin fişini elektrik prizinden çekin.
9. Yanıkların oluşmasını engellemek için çatal ve bıçak sepetini çıkarmadan önce birkaç dakika bekleyin. Alt raftan başlamak üzere rafları sırasıyla boşaltın.

Çalışmakta olan bir yıkama devrini değiştirmek

Yıkama devri seçim işlemi sırasında herhangi bir hata yapıldıysa yeni başlatılmış olması kaydıyla devrin değiştirilmesi mümkündür: Yıkama devri başladıktan sonra AÇMA/KAPATMA/Sıfırlama düğmesine basarak makineyi kapatın. Aynı düğmeyi kullanarak tekrar açın ve istenilen yıkama devrini ve opsiyonları seçin.

Ekstra çatal ve bıçak eklemek

Başlat/Durdur düğmesine basın (ilgili gösterge ışığı yanıp sönecektir). Elektrik kaçaklarına dikkat ederek kapıyı açın ve çatal ve bıçakları makinenin içine yerleştirin. Kapağı kapatın ve Başlat/Durdur düğmesine basın (sabit ışık): Devir, durdurulduğu noktadan devam eder.

⚠ Makinenin durdurulması için Başlat/Durdur düğmesine basıldıysa yıkama devri ya da Gecikmeli Başlama fonksiyonu (seçildiyse) kesintiye uğratılır. Bu aşamada yıkama devrinin değiştirilmesi mümkün değildir.

Rastlantısal kesintiler

Yıkama devri sırasında kapak açılırsa ya da elektrik kesintisi yaşanırsa devir duracaktır. Kapak kapatıldıktan ya da elektrik geldikten sonra yıkama devri, yine durduğu noktadan devam eder.

Deterjanın ölçülmesi

Yıkama sonunda iyi bir sonucun elde edilmesi, kullanılan deterjan miktarının doğruluğuna da bağlıdır; belirtilen miktardan daha fazla deterjan kullanımı yıkamayı daha verimli hale getirmezken aynı zamanda çevresel kirlilik yaratır.

⚠ **Sadece bulaşık makineleri için özel olarak üretilen deterjanları kullanın.**

⚠ **Sıvı bulaşık deterjanı KULLANMAYIN.**

⚠ **Fazla miktarda deterjanın kıllanılması, devir sona erdikten sonra makinenin içinde sabun artıklarının kalmasına neden olabilir.**

⚠ **Tabletlerin kullanımı, sadece ÇOK FONKSİYONLU TABLETLER opsiyonunu sunan modeller için tavsiye edilmektedir.**

⚠ **Her yıkama ve kurutma devrinden en iyi sonuçları almak için toz deterjan, durulama sıvısı ve tuz kullanılmalıdır.**

A Bölmesi:Yıkama deterjanı
B Bölmesi: Ön yıkama deterjanı

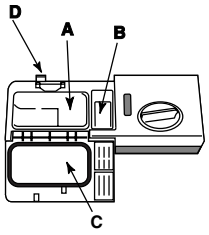

1. D düğmesine basarak C kapağını açın.
2. *Yıkama devirleri tablosuna* göre deterjanı dökün:
• Toz deterjan için A ve B bölmelerini kullanın.
• Tablet şeklindeki deterjanlar için: Devir için 1 tablet gerekiyorsa söz konusu tableti A bölmesine yerleştirin ve kapağı kapatın; 2 tablet gerekiyorsa ikinci tableti cihazın en altına yerleştirin.
3. Bölmenin kenarlarından deterjan kalıntılarını temizleyin ve klik sesini duyana kadar kapağı kapatın.

*Sadece seçilen modellerde mevcuttur.

Yıkama devirleri

Hotpoint ARISTON

TR

⚠ **Çatak, kaşık ve bıçaklar az kirli ise ya da bulaşık makinesine yerleştirilmeden önce sudan geçirilmişler ise bu doğrultuda kullanılan deterjan miktarını azaltın.**

⚠ **Yıkama devrilerinin ve seçeneklerin sayısı ve tipi, bulaşık makinesi modeline bağlı olarak değişiklik göstermektedir.**

Yıkama devri seçimi hakkında talimatlar	Yıkama devri	Deterjan (A) = bölme A (B) = bölme B			Kurutmalı yıkama devirleri	Yıkama Devri Süresi (Tolerans ± %10) Saat Dakika
		Toz	Sıvı	Tablet		
Çok kirli bulaşıklar ve tavalar (kırılgan parçalari çin kullanılmamalıdır)	Yoğun	30 g (A)	30 ml (A)	1 (A)	Evet	2:15’
Normal kirli tavalar ve bulaşıklar için Standart günlük yıkama devri	Normal	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Evet	1:45’
Düşük enerji kullanımısa ğlayan çevreye duyarlı yıkama devri, tavalar ve tabaklar için uygundur	Ekonomik*	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Evet	2:20’

Notlar:

* Ekonomik yıkama devri, EN-50242 yönetmeliklerine uygundur. Diğer yıkama devirlerinden daha uzun sürmesine rağmen daha az enerji kullanır ve çevreye daha az zararlıdır.

Test Laboratuarları için Not: İlgili EN test koşullarına ilişkin bilgi almak için lütfen aşağıdaki adrese bir e-posta gönderin: ASSISTENZA_EN_LVS@indesitcompany.com

Deterjanın ölçülmesini daha kolay hale getirmek için aşağıdaki bilgileri inceleyin:
1 çorba kaşığı = 15 g toz = yaklaşık 15 ml sıvı 1 çay kaşığı = 5 g toz = yaklaşık 5 ml sıvı

Durulama maddesi ve işlenmiş tuz

TR

⚠ **Sadece bulaşık makineleri için özel olarak üretilen ürünleri kullanın. Tablet tuz ya da endüstriyel tuz veya sıvı bulaşık deterjan kullanmayın.**
Paket üzerinde verilen talimatları izleyin.

⚠ Çok fonksiyonlu bir ürün kullanılıyorsa durulama maddesi eklemenize gerek yoktur; **fakat özellikle de suyun sert ya da çok sert olduğu yerlerde yaşıyorsanız tuz eklemenizi önemle tavsiye ederiz**. Paket üzerinde verilen talimatları izleyin.

⚠ **Tuz ya da durulama maddesi eklemezseniz YETERSİZ TUZ* ve YETERSİZ DURULAMA MADDESİ* gösterge ışıkları yanıp öyle kalacaktır.**

Durulama maddesinin ölçülmesi

Durulama maddesi, su, yüzeylerin üzerinden devamlı akar ve herhangi bir çizik ve ya iz bırakmadan durulama işlemini gerçekleştirirken bulaşıkların kurumasını kolaylaştırır.
Durulama maddesi dağıtıcısı doldurulmalıdır:

- Kontrol paneli üzerindeki YETERSİZ DURULAMA MADDESİ* gösterge ışığı yandığı zaman;

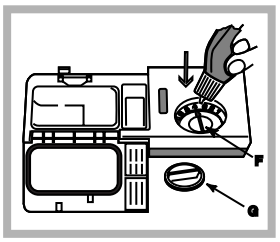

1. (G) kapağını saat yönünün tersine döndürerek dağıtıcıyı açın.
2. Dağıtıcıdan taşmamasına dikkat ederek durulama maddesini dağıtıcıya dökün. Durulama maddesi dağıtıcıdan taşarsa, kuru bir bez ile dökülen miktarı silin.
3. Kapağı tekrar yerine takın.

Durulama maddesini ASLA makinenin içine direkt olarak dökmeyin.

Durulama maddesi miktarının ayarlanması

Kurutma sonuçlarından tam anlamıyla memnun değilseniz durulama maddesinin miktarını ayarlayabilirsiniz. Dozaj ayarlayıcısını (F) bir tornavida kullanmak suretiyle daha önceden belirlenen 6 pozisyondan birine getirin (öntanımlı pozisyon 4'tür):

- Bulaşıkların üzerinde çizgiler oluşuyorsa, ayarlayıcıyı daha küçük bir sayıya getirin (1-3).
- Bulaşıklar üzerinde su damlaları bulunuyorsa ya da devir bittikten sonra kireç izleri görülüyorsa ayarlayıcıyı daha büyük bir sayıya getirin (4-6).

Su sertliğinin ayarlanması

Her bulaşık makinesinde özellikle bu tür cihazlar için tasarlanan işlenmiş tuz kullanarak daha sonra bulaşıkları yıkamak için kullanılan suyun içindeki kireci alan bir su yumuşatıcısı bulunmaktadır.

Bulaşık makinesi, kirliliği azaltacak ve bölgenizdeki su sertliğine göre yıkama performansını optimize edecek seçenekler sunmaktadır. Bu bilgi, konutunuza su tedarik eden organizasyondan öğrenilebilir.

- AÇMA/KAPATMA düğmesini kullanarak makineyi kapatın ve kapağı açın.
- YIKAMA DEVRİNİ SEÇİN düğmesini ilk önce 3 numaralı yıkama devrine, ardından 1 numaralı yıkama devrine ve ardından yine 3 numaralı yıkama devrine getirin.
- AÇMA/KAPATMA düğmesine basın; yıkama devri faz göstergesinin ışığı yanıp sönecektir. Artık su sertliği seviyesinin seçilmesi mümkündür. Her yıkama devri için bir su sertliği seviyesi vardır:
Örn: Yıkama devri 1, su sertliği seviyesi 1
Yıkama devri 2, su sertliği seviyesi 2,vb, vb maksimum (5*) beş seviyeye kadar.
(Ön tanımlı su yumuşatıcı ayarı seviye 1'tür)
- Fonksiyondan çıkmak için yaklaşık 30 saniye bekleyin ya da AÇMA/KAPATMA düğmesini kullanarak makineyi kapatın.

Çok fonksiyonlu tabletler kullanılırken bile su dağıtıcı doldurulmalıdır.

Su Sertliği Tablosu						
°dH		°fH		mmol/l		Seviye
0	17	0	30	0	3	1
17	34	31	60	3,1	6	2
34	50	61	90	6,1	9	3*
0°f ile 10°f arasındaki değerler için tuz kullanmanızı tavsiye etmiyoruz.						
* Bu ayar, devrin süresinin bir miktar uzamasına neden olabilir.						

(°dH = Alman derecesi ile hesaplanmış sertlik - °f = Fransız derecesi ile hesaplanmış sertlik – mmol/l = litre başına milimol)

İşlenmiş tuzun ölçülmesi

Bir yıkama devrinden mümkün olan en iyi sonuçları almak için dağıtıcının devamlı olarak dolu olduğundan emin olun. İşlenmiş tuz, sudan kireci alır ve buna bağlı olarak bulaşıklar üzerinde kireç oluşumunu engeller.
Tuz dağıtıcı, bulaşık makinesinin alt kısmında bulunmakta olup (*bknz Tanım*) doldurulmalıdır:

- Tuz dağıtıcısının kapağına gözle bakarak yeşil ibre* görülmediği zaman
- Kontrol paneli üzerindeki YETERSİZ DURULAMA MADDESİ* gösterge ışığı yandığı zaman.

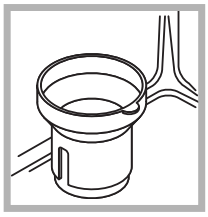

1. Alt kremayeri sökün ve konteynır kapağının vidalarını açın (saat yönünün tersine).
2. İlk defa yapıyorsanız: su tankını tam ağzına kadar doldurun.
3. Huniyi* yerleştirin (*bakınız figür*) ve tuz konteynırını tam ağzına kadar doldurun (Bu konteynır yaklaşık 1 kg kaldırabilmelidir); az miktarda suyun dışarı sızması olağandır.
4. Huniyi* çıkartın ve açıklık üzerinde kalan tüm tuz artıklarını temizleyin; akan suyun altında kapağı durulayın ve ardından kapağın alt kısmında yıldız şeklinde düzenlenmiş olarak bulunan dört yarıktan suyun dışarı çıkmasını sağlamak için aşağıya doğru bakan başlığa tekrar vidalayın. (Yeşil ibreli kapak*)

Konteynıra her tuz ekleyişinizde bu işlemleri gerçekleştirmenizi tavsiye ederiz.
Kapağın yerine sıkıca vidalanmış olduğundan emin olun; böylece yıkama döngüsü süresince dağıtıcının içine herhangi bir deterjan madde giremeyecektir (Bu durum su yumuşatıcısına tamir edilemez bir şekilde zarar verebilirdi.).

⚠ Gerekli olduğu zaman tuz dağıtıcısından dışarıya sızan tuz çözeltisinin temizlendiğinden emin olmak için yıkama devrinden önce tuzu ölçün.

* Sadece seçilen modellerde mevcuttur.

Bakım ve onarım

Su ve elektrik kaynaklarının kapatılması

- Sızıntıları engellemek amacıyla su musluğunu her yıkama devrinden sonra kapatın.
- Makine temizlenirken ya da bakımı yapılırken makinenin fişini çekin.

Bulaşık makinesinin temizlenmesi

- Makinenin dış yüzeyleri ve kontrol paneli, iplikçik bırakmayan hafif nemli bir bez parçası ile temizlenebilir. Deterjan ya da aşındırıcı ürünler kullanmayın.
- Cihaz içinde oluşan leke ya da izler nemli bir bez ile ve az bir sirke ile temizlenebilir.

İstenmeyen kokuların engellenmesi

- Nem oluşmaması ve oluşan nemin makine içine hapsedilmemesi için makinenin kapağını devamlı olarak aralık tutun.
- Kapak çevresindeki su sızdırmaz bantları ve deterjan dağıtıcılarını düzenli aralıklarla nemli bir sünger ile temizleyin. Bu, yiyecek artıklarının bantlar üzerinde kalmasını engelleyecek ve bu artıkların neden olduğu istenmeyen kokuların oluşumunu önleyecektir.

Püskürtücü kolların temizlenmesi

Yiyecek artıkları, püskürtücü kollar üzerine yapışıp suyun püskürtüldüğü delikleri tıkayabilir. Bu nedenle püskürtücülerin düzenli aralıklarla kontrol edilmesi ve metal içermeyen bir fırça ile temizlenmesi önerilmektedir.
Her iki püskürtücü kol da çıkartılabilir.

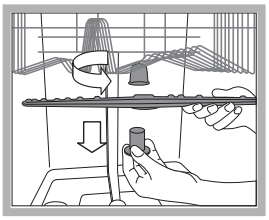

Üst püskürtücü kolu çıkarmak için kilit halkasını saat yönünün tersine döndürün. Üst püskürtücü kol, daha fazla sayıda delik bulunan yüzün yukarıya doğru geldiğinden emin olunması için değiştirilmelidir.

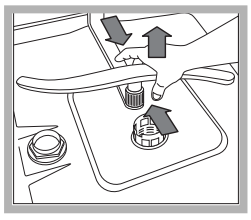

Alt püskürtücü kol, yandaki sekmelere basarak ve yukarıya doğru çekerek çıkartılabilir.

Su Giriş Filtresinin Temizlenmesi*

Eğer su hortumları yeni ya da uzun bir süre boyunca kullanılmamışlarsa gerekli bağlantıları yapmadan önce hortumların temiz ve artıklardan arındırılmış olduğundan emin olmak için su hortumlarından su geçişine izin verin. Eğer söz konusu önlem alınmaz ise su girişi tıkanabilir ve bulaşık makinesi hasar görebilir.

⚠ Musluk çıkışındaki su giriş filtresini düzenli olarak temizleyin;
- Su musluğunu kapatın.
- Su giriş hortumunun ucunun vidalarını sökün, filtreyi çıkartın ve akan suyun altında dikkatlice temizleyin.
- Filtreyi yenisi ile değiştirin ve su hortumunu eski pozisyonunda vidalayın.

Filtrelerin temizlenmesi

Filtre grubu, yıkama suyundan yiyecek kalıntılarını temizleyen ve suyu tekrar döndüren üç ayrı filtreden oluşmaktadır. Her yıkamada en iyi sonuçları elde etmek için temizlenmelidirler.

⚠ Filtreleri düzenli aralıklarla temizleyin.

⚠ Bulaşık makinesi filtreler bulunmadan ya da filtreler gevşek durumdayken kullanılmamalıdır.

• Bir çok yıkamadan sonra filtre grubunu kontrol edin ve gerekli olması durumunda üzerinden su akıtarak metal içermeyen bir fırça vasıtasıyla aşağıdaki talimatları izleyerek temizleyin:
1. C silindirik filtresini saat yönünün tersine döndürün ve dışarı çekin (şkl 1).
2. Kapak filtresi B'yi yan kanatlara hafif basınç uygulayarak çıkartın (şkl 2).
3. Paslanmaz çelik plaka filtresi A'yı dışarı doğru kaydırın (şkl 3).
4.Tıkacı kontrol edin ve yiyecek artıklarını temizleyin. Yıkama devri pompasını (siyah kenarlı) **ASLA SÖKMEYİN** *(şkl 4).*

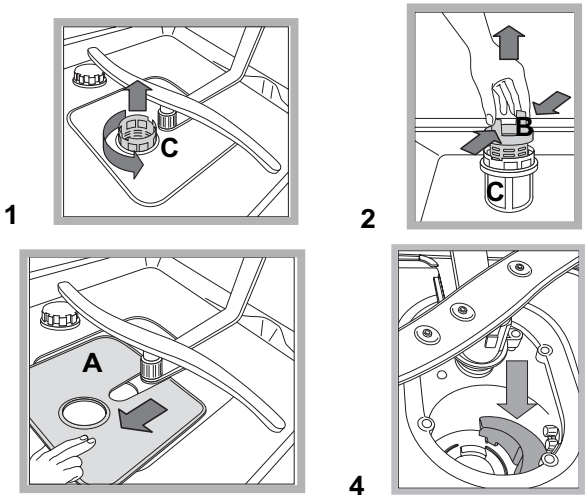

Filtreleri temizledikten sonra filtre grubunu yeniden yerine takın ve sabitleyin; bu durum bulaşık makinesinin verimli kullanımının elde edilmesi için gereklidir.

Uzun bir süre boyunca makinenin kullanılmadan bırakılması

- Makineyi elektrik kaynağından çıkarın ve su musluğunu kapatın.
- Makinenin kapağını aralık bırakın.
- Döndüğünüz zaman bulaşık makinesi boş iken bir yıkama devri çalıştırın.

* Sadece seçilen modellerde mevcuttur.

Önlemler ve öneri

TR

⚠ Bu makine, mevcut uluslar arası güvenlik standartlarına uygun olarak tasarlanmış ve üretilmiştir. Aşağıdaki bilgi güvenliğiniz için hazırlanmıştır, bu nedenle dikkatle okunmalıdır.

Genel güvenlik

- Cihaz, ev içinde konut kullanımı için tasarlanmış olup ticari ya da endüstriyel kullanımı amaçlanmamıştır.
- Ev bulaşıklarının bu kullanım kılavuzunda belirtilen şekilde yıkanması için makine sadece yetişkinler tarafından kullanılmalıdır.
- Makine, dış mekanlarda ya da sadece üstü kapalı alanlarda kurulmamalıdır. Makinenin yağmur ya da fırtına altında bırakılması çok tehlikelidir.
- Çıplak ayakla makineye dokunmayın.
- Makine prizden çekilirken kabloyu değil fişi, elektrik prizinden çekin.
- Makine temizlenmeden ya da bakım işlemleri başlatılmadan önce su besleme musluğu kapatılmalı ve makinenin fişi, elektrik prizinden çıkarılmalıdır.
- Makine arızalanırsa her ne şart altında olursa olsun makineyi kendiniz tamir etmeye çalışmayın ve makinenin iç kısımlarına dokunmayın.
- Isıtıcı bileşene asla dokunmayın.
- Makinenin açık olan kapağı üzerine yaslanmayın ya da oturmayın Bu, makinenin devrilmesine neden olabilir.
- Önemli bir engel teşkil edeceği için kapak açık bırakılmamalıdır.
- Deterjanları ve durulama maddelerini çocukların ulaşamayacağı yerlerde muhafaza edin.
- Paketleme malzemesi oyuncak olarak kullanılmamalıdır.

Tasfiye

- Paketleme malzemesinin tasfiyesi: Paketlerin yeniden kullanılabilir olup olmadığına dair yerel yasaları inceleyin.
- Atık Elektrikli ve Elektronik Donanımlar (WEEE) konulu ve 2002/96/EC sayılı Avrupa Direktiflerinde konutlarda kullanılan elektrikli cihazların normal katı atık döngüsü içinde tasfiye edilmemesi gerektiği belirtilmektedir. Eskimiş cihazlar, toplum sağlığına ve atmosfere verilebilecek potansiyel zarar engellenerek makine içinde bulunan malzemelerin yeniden kullanım ve geri dönüşüm masraflarının optimize edilmesi için ayrı olarak toplanmalıdır. Üzerinde çarpı işareti bulunan çöp kutusu, elektrikli ve elektronik alet sahiplerine ayrı atık toplanması hususundaki sorumluluklarını hatırlatmak için tüm ürünler üzerinde bulunmaktadır.

  Konutlarda kullanılan elektrikli cihazların doğru bir şekilde tasfiye edilmesi hususunda ayrıntılı bilgi edinmek için ilgili toplum yetkilisine ya da yerel bayiinize başvurabilirsiniz.

Enerji tasarrufu yapmak ve çevreye karşı duyarlı olmak

Su ve enerji tasarrufu yapmak

- Sadece bulaşık makinesi dolu olduğu zaman yıkama devrini başlatın. Bulaşık makinesinin dolmasını beklerken Sudan Geçirme devrini kullanarak istenmeyen kokuların kullanımını engelleyebilirsiniz. (*bknz Yıkama devirleri*)
- *Yıkama devirleri tablosunu* kullanarak bulaşıkların kirlilik seviyesine ve bulaşık tipine uygun olan yıkama devrini seçin:
  - Normal derecede kirli bulaşıklar için daha düşük enerji ve su kullanan Ekonomik yıkama devrini kullanın.
  - Bulaşık miktarı normalden daha az ise Yarım yükleme opsiyonunu kullanın *(*bknz Başlangıç ve kullanım*)
- Elektrik tedarikçiniz, elektrik tasarrufu saatleri hakkında bilgi veriyorsa yıkama devirlerini daha düşük ücretlendirme uygulandığı saatler arasında çalıştırın. Gecikmeli başlatma *düğmesi (*bknz Başlangıç ve kullanım*) yıkama devirlerini istediğiniz şekilde organize etmenize yardımcı olur.

Enzim içeren fosfatsız ve klorsuz deterjanlar

- Çevreye zararlı olmaları nedeniyle fosfat ya da klor içeren deterjanları kullanmamanızı önemle tavsiye ederiz.
- Enzimler, 50°C sıcaklık altında özellikle etkilidir ve bu nedenle enzim içeren deterjanlar, normalde 65°C sıcaklık altında elde edilen sonuçların daha düşük yıkama devri sıcaklıklarında elde edilmesi açısından kullanılabilir.
- Deterjanın sarf edilmesinin önlenmesi açısından, ürünü imalatçının talimatları, su sertliği, kirlilik seviyesi ve bulaşık miktarına göre uygun miktarlarda kullanın. Biyolojik olarak geri dönüştürülebilir olsalar da deterjanlar doğanın dengesini değiştirebilen malzemeler içerir.

* Sadece seçilen modellerde mevcuttur.

Sorun giderme

Hotpoint ARISTON

TR

Cihazın çalışmasında problem olması durumunda Destek talebinde bulunmadan önce aşağıdaki listede bulunan çözüm yollarını kontrol edin:

Problem:	Muhtemel nedenler /Çözümler:
Bulaşık makinesi çalışmıyor.	• Fiş, elektrik prizine doğru bir şekilde yerleştirilmemiş ya da evin genelinde elektrik yok. • Bulaşık makinesinin kapağı tam olarak kapatılmamış. • Gecikmeli başlatma, programlanmış (bknz Başlangıç ve kullanım)
Bulaşık makinesinden dışarı su tahliye edilmiyor.	• Bulaşık makinesi devri henüz bitmemiş. • Su giriş hortumu bükülmüş (bknz Kurulum). • Drenaj borusu tıkanmış. • Filtre, yiyecek artıkları nedeniyle tıkanmış.
Bulaşık makinesi aşırı gürültü yapıyor.	• Bulaşıklar birbirine ya da püskürtücü kollara çarpıyor • Aşırı köpük oluşuyor. Deterjan doğru olarak ölçülmemiş ya da bulaşık makine lerinde kullanımı uygun değil (bknz Başlangıç ve kullanım).
Bulaşıklar ve bardaklar beyaz bir tabaka ile ya da kireç ile kaplanıyor.	• İşlenmiş tuzun seviyesi yeterli değil ya da dozaj ayarı su sertliğine uygun değil (bknz Durulama maddesi ve tuz). • Tuz dağıtıcı üzerindeki kapak tamamıyla kapanmamış. • Durulama maddesi bitmiş ya da dozajı yetersiz. • Bulaşıklar dayanıklı bir malzemeden yapılmamış.
Bulaşıklar ve bardaklar çiziliyor ya da bulanık görünüyor.	• Durulama malzemesinin dozajı çok fazla.
Bulaşıklar tamamıyla kurumuyor.	• Kurutma programı olmayan bir yıkama programı seçilmiş. • Durulama maddesi bitmiş ya da dozajı yetersiz (bknz Durulama maddesi ve tuz) • Durulama maddesi dağıtıcısının ayarı yeterli değil.
Bulaşıklar temiz değil.	• Raflar aşırı yüklenmiş (bknz Rafların yüklenmesi) • Bulaşıklar doğru bir şekilde düzenlenmemiş. • Püskürtücü kollar rahatça hareket edemiyor. • Yıkama devri çok hassas (bknz Yıkama devirleri) • Aşırı miktarda köpük oluşuyor. Deterjan doğru olarak ölçülmemiş ya da bulaş ıkmakinelerinde kullanımı uygun değil (bknz Başlangıç ve kullanım). • Durulama maddesi bölmesi üzerindeki kapak tam olarak kapatılmamış. • Filtre kirli ya da tıkanmış (bknz Bakım ve onarım) • İşlenmiş tuz seviyesi yetersiz (bknz Durulama maddesi ve tuz)
Bulaşık makinesi su almıyor/ musluk kapalı alarmı (Tuz, Durulama Maddesi, Kurutma ve Son gösterge ışıkları yanıp söner)	• Su tesisatında su yok. • Su giriş hortumu bükülmüş (bknz Kurulum). • Musluğu açın ve cihaz birkaç dakika sonra çalışmaya başlayacaktır. • Tuz ve Durulama Maddesi gösterge ışıkları yanıp sönerken herhangi bir işlem gerçekleştirilmediğinden dolayı cihaz kilitlenmiş. AÇMA/KAPATMA düğ mesini kullanarak makineyi kapatın, musluğu açın ve 20 saniye sonra aynı d üğmey e basarak makineyi tekrar açın. Makineyi yeniden programlayın ve yıkama devrini baştan başlatın.
Su yükleme solenoit vanasında arıza alarmı (Tuz, Durulama Maddesi ve Kurutma gösterge ışıkları yanıp söner)	• AÇMA/KAPATMA düğmesine basarak cihazı kapatın ve bir dakika sonra ciha zı yeniden açın. Alarm devam ediyorsa su basması riskini ortadan kaldırmak için su musluğunu kapatın, fişi elektrik prizinden çekin ve Desteğe başvurun.
Su giriş hortumu alarmı/Su giriş filtresi tıkanmış. (Tuz, Durulama Maddesi, Yıkama De vri Kurutma ve Son gösterge ışıkları y anıp söner)	• ON (AÇ) / OFF (KAPAT) butonuna basarak uygulamayı durdurun. Su basmas ı riskini engellemek için su musluğunu kapatın ve fişi elektrik prizinden çekin. Su giriş filtresinin çeşitli pisliklerle tıkanmamış olduğundan emin olun. (Bakınız “Bakım ve Onarım” Bölümü).

Destek

TR

Desteğe başvurmadan önce

- Problemin Sorun Giderme rehberi kullanılarak çözülüp çözülmeyeceğini kontrol edin (bknz Sorun Giderme).
- Karşılaştığınız problemin devam edip etmediğini görmek için yıkama devrini baştan başlatın.
- Problem devam ediyorsa Yetkili Teknik Destek Servisine başvurun.

⚠ Yetkisiz teknisyenlerin verdiği hizmetleri kullanmayın.

Lütfen aşağıda belirtilen bilgileri hazır edin:
- Arıza tipi
- Cihaz Modeli (Mod)
- Seri Numarası (S/N)

Bu bilgiler, cihazın bilgi plakası üzerinde bulunur (*bknz Cihazın tanımı*).

Operating instructions

DISHWASHER

EN

English,13

LBF 31

Contents

Installation, 14-15
Positioning and levelling
Connecting the water and electricity supplies
Advice regarding the first wash cycle
Technical data

Description of the appliance, 16
Overall view
Control panel

Loading the racks, 17
Lower rack
Cutlery basket
Upper rack

Start-up and use, 18
Starting the dishwasher
Measuring out the detergent
Wash options

Wash cycles, 19
Table of wash cycles

Rinse aid and refined salt, 20
Measuring out the rinse aid
Measuring out the refined salt

Care and maintenance, 21
Shutting off the water and electricity supplies
Cleaning the dishwasher
Preventing unpleasant odours
Cleaning the sprayer arms
Cleaning the water inlet filter
Cleaning the filters
Leaving the machine unused for extended periods

Precautions and advice , 22
General safety
Disposal
Saving energy and respecting the environment

Troubleshooting, 23

Assistance, 24
Before contacting Assistance

Hotpoint ARISTON

Installation

EN

⚠ Keep this instruction manual in a safe place for future reference. If the appliance is sold, given away or moved, please ensure the manual is kept with the machine, so that the new owner may benefit from the advice contained within it.

⚠ Please read this instruction manual carefully: it contains important information regarding the safe installation, use and maintenance of the appliance.

⚠ If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back.

Positioning and levelling

1. Remove the appliance from all packaging and check that it has not been damaged during transportation.
If it has been damaged, contact the retailer and do not proceed any further with the installation process.

2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (*see the Assembly instruction sheet*).

3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating.

4*. Adjust the height of the rear foot from the front of the appliance* on the central lower part of the dishwasher, turning a hexagonal spanner (red color) with an opening of 8 mm in a clockwise direction to increase the height or in an anticlockwise direction to decrease the height.

Connecting the water and electricity supplies

⚠ Connection to the water and electricity supplies should only be performed by a qualified technician.

⚠ The dishwasher should not stand on top of the water hoses or the electricity supply cable.

⚠ The appliance must be connected to the water supply network using new hoses.
Do not use old hoses.

The water inlet (A) and outlet (B) hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation (*see figure*).

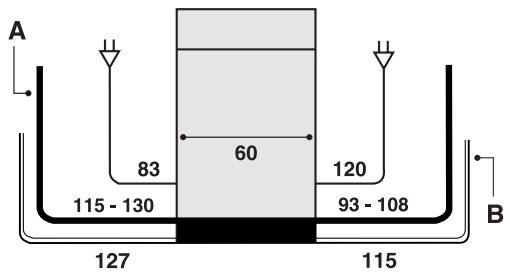

Connecting the water inlet hose

- To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a ¾ gas threaded connection.

- To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C.
Screw the hose to the tap as described for connection to a cold water supply.

⚠ If the inlet hose is not long enough, contact a specialist store or an authorised technician (*see Assistance*).

⚠ The water pressure must be within the values indicated in the Technical data table (*see adjacent information*).

⚠ The hose should not be bent or compressed.

Anti-flooding protection

To ensure floods do not occur, the dishwasher:
- is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance.

Some models are also equipped with the supplementary safety device *New Acqua Stop**, which guarantees anti-flooding protection even in the event of a supply hose rupture.

WARNING: HAZARDOUS VOLTAGE!

Under no circumstance should the water inlet hose be cut as it contains live electrical parts.

* Only available in selected models.

EN

Connecting the water outlet hose

Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water.

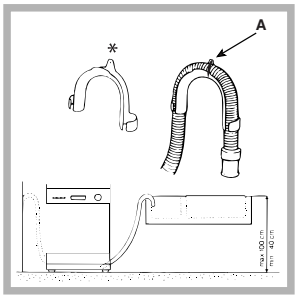

The special plastic elbow* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water.
The part of the hose marked with the letter A should be between 40 and 100 cm above the ground (*see figure*).

⚠ We advise against the use of hose extensions.

Electrical connection

Before inserting the plug into the electrical socket, make sure that:

- The socket is earthed and complies with current regulations.
- The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (*see chapter entitled Description of the appliance*).
- The power supply voltage falls within the values indicated on the data plate on the inside of the door.
- The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (*see Assistance*); do not use extension cables or multiple sockets.

⚠ Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible.

⚠ The cable should not be bent or compressed.

⚠ If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance)

⚠ The Company shall not be held responsible for any incidents that occur if these regulations are not observed.

Anti-condensation strip*

After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form.

Advice regarding the first wash cycle

After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (*see chapter entitled Rinse aid and refined salt*). The water may overflow: this is normal and is not a cause for concern. Select the water hardness value (*see chapter entitled Rinse aid and refined salt*). - After the salt has been poured into the machine, the LOW SALT indicator light* switches off.

⚠ If the salt container is not filled, the water softener and the heating element may be damaged as a result.

Technical data

Dimensions	width 60 cm height 85 cm depth 60 cm
Capacity	12 standard place-settings
Water supply pressure	0,05 ÷ 1MPa (0.5 ÷ 10 bar) 4.3 psi – 145 psi
Power supply voltage	See appliance data plate
Total absorbed power	See appliance data plate
Fuse	See appliance data plate
CE 	This dishwasher conforms to the following European Community Directives: -73/23/EEC dated 19/02/73 (Low Voltage) and subsequent modifications -89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications -97/17/EC (Labelling) -2002/96/ CE Waste Electrical and Electronic Equipment (WEEE)

* Only available in selected models.

Description of the appliance

EN

Overall view

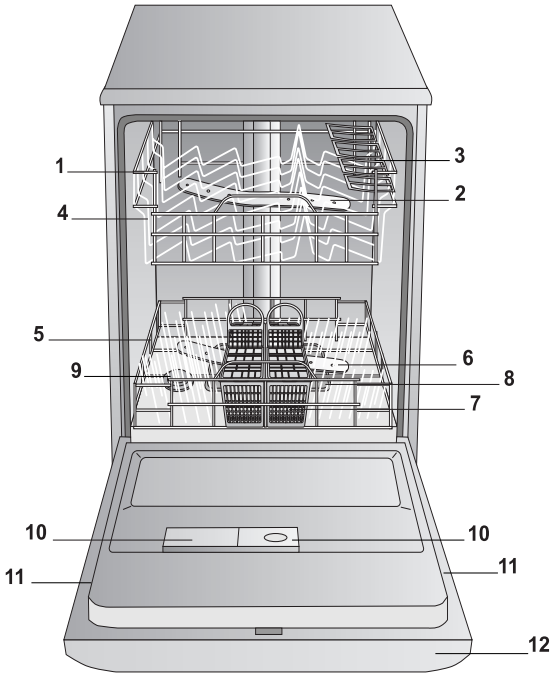

1. Upper rack
2. Upper sprayer arm
3. Tip-up compartments
4. Rack height adjuster
5. Lower rack
6. Lower sprayer arm
7. Cutlery basket
8. Washing filter
9. Salt dispenser
10. Detergent and rinse aid dispensers
11. Data plate
12. Control Panel***

Control panel

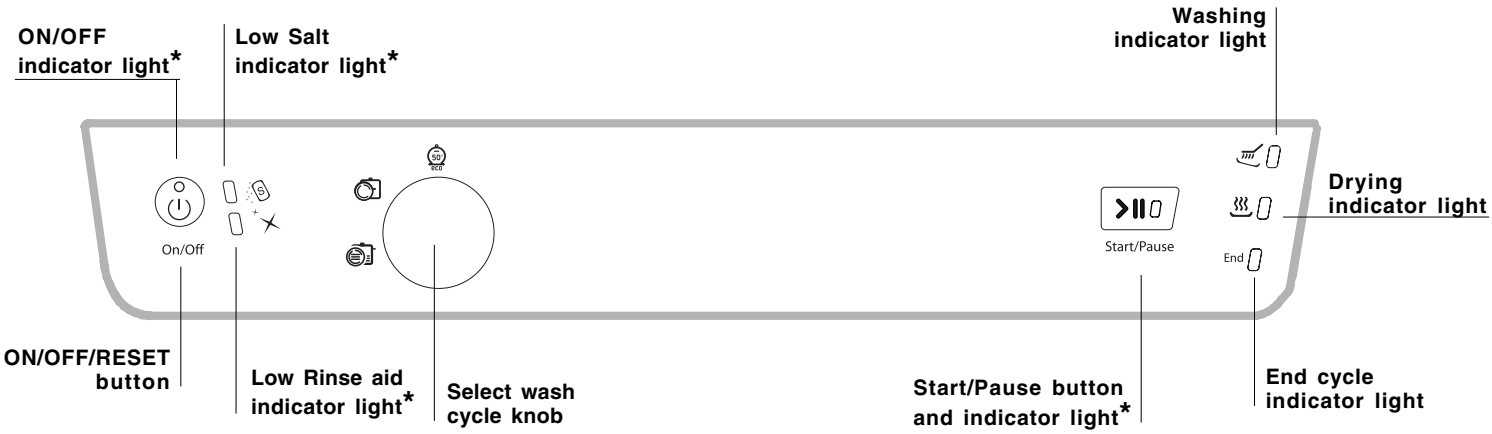

***Only in completely built-in models.
* Only available in selected models.

Loading the racks

Hotpoint ARISTON

EN

⚠ Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and cups.
After loading the appliance, check that the sprayer arms can rotate freely.

Lower rack

The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc. as seen in the *Loading examples.*
Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm.
Some dishwasher models are fitted with tip-up sections*, which can be used in a vertical position when arranging plates or in a horizontal position when arranging pans and salad bowls.

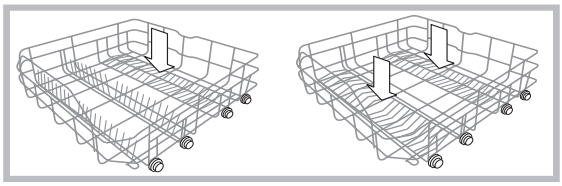

Cutlery basket

The type of cutlery basket may vary according to the dishwasher model: it may be modular, non-modular or a sliding version. The non-modular basket must only be positioned at the front of the lower rack.
The modular basket may be separated into two parts, a solution which is recommended when performing a half load wash (only in models offering this option), is available in a sliding version (positioned at any point on the lower rack by sliding it between the fixed or tip-up inserts.
- Both versions are fitted with a collapsible sliding system which means the cutlery can be arranged in the best possible way.

⚠ Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tip-up compartments on the upper rack.

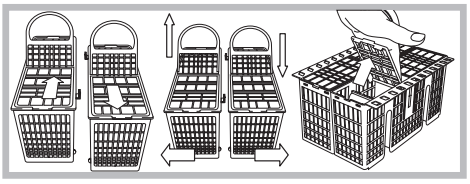

Cutlery basket positioning examples

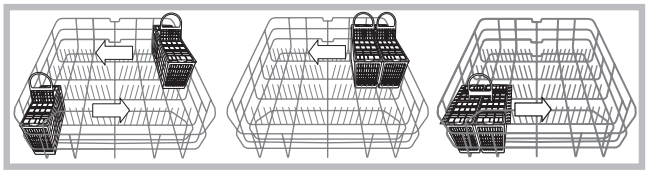

Upper rack

Load this rack with delicate and lightweight crockery: glasses, tea and coffee cups, saucers, small salad bowls, saucepans and small saucepans which are not too soiled, using the *Loading examples* as a guide.
• Mugs and cups: place these on the tip-up compartments**.
• Long sharp knives and serving utensils: place these on the tip-up compartments**.

Adjusting the height of the upper rack

In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower level. (in models which

⚠ **The height of the upper rack should ideally be adjusted WHEN THE RACK IS EMPTY.**

Never lift or lower the rack on one side only.

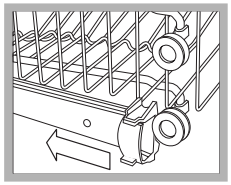

Open the left and right guide rail stops and pull out the rack; position it higher or lower as required, slide it along the guide rails until the front wheels are in place and close the stops (*see figure*).

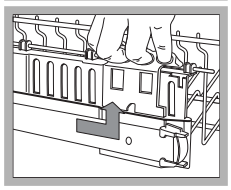

If the rack is fitted with **Dual Space** handles* (*see figure*), pull out the upper rack until it reaches its stop point, grip the handles at the sides of the rack and move it upwards or downwards, then slowly let it fall back into place.

Loading examples for the upper rack

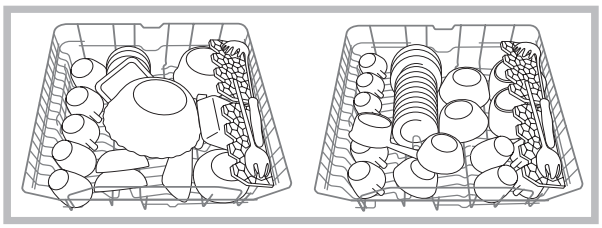

Loading examples for the lower rack

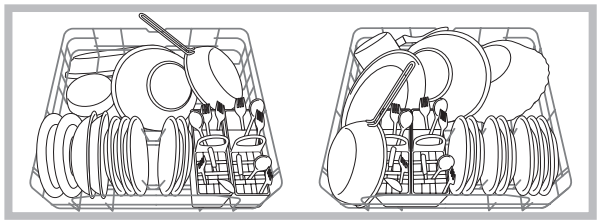

Items which should not be washed in the dishwasher

- Wooden items, objects with wooden or horn handles or glued-on parts.
- Items made from aluminium, copper, brass, pewter or tin.
- Items made from plastic material which is not heat-resistant.
- Antique or hand-painted porcelain.
- Antique silver. Silver which is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals.

⚠ We recommend the use of crockery which is dishwasher safe.

*Only available in selected models.
** The number and position may vary.

Start-up and use

EN

Starting the dishwasher

1. Turn the water tap on.
2. Press the ON/OFF button: all the indicator lights on the control panel will light up for a few seconds.
3. Open the door and pour in a suitable amount of detergent (*see below*).
4. Load the racks (*see Loading the racks*) and shut the door.
5. Select the wash cycle by turning the WASH CYCLE SELECT knob in a clockwise direction: align the notch on the knob with the number or symbol representing the desired wash cycle. The START/PAUSE indicator light will flash.
6. Select the wash options* (*see adjacent information*).
7. Start the cycle by pressing the START button; the indicator light will become green and remain lit in a fixed manner. The indicator light corresponding to the wash phase will switch on, signalling that the wash cycle has begun.
8. At the end of the wash cycle the END indicator light will switch on (fixed green light). Switch off the appliance by pressing the ON/OFF button, shut off the water valve and unplug the appliance from the electricity socket.
9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level.

Modifying a wash cycle in progress

If a mistake was made during the wash cycle selection process it is possible to change the cycle, provided that it has only just begun: once the wash cycle has started, switch off the machine by pressing and holding the ON/OFF/Reset button. Switch it back on using the same button and select the desired wash cycle and options.

Adding extra crockery

Press the Start/Pause button (the corresponding indicator light will flash). Open the door, taking care to avoid the escaping steam, and place the crockery inside the appliance. Press the Start/Pause button (fixed light): the cycle starts from the point at which it was interrupted.

⚠ If the Start/Pause button is pressed so as to pause the machine, the wash cycle or the Delayed Start function (if selected) is interrupted.
At this stage it is not possible to change the wash cycle.

Accidental interruptions

If the door is opened during the wash cycle, or if there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been shut or once the electricity supply is restored.

Measuring out the detergent

A good wash result also depends on the correct amount of detergent being used; exceeding the stated amount does not result in a more effective wash and increases environmental pollution.

⚠ **Only use detergent which has been specifically designed for dishwashers.**

⚠ **DO NOT USE washing up liquid.**

⚠ **Using excessive detergent may result in foam residue remaining in the machine after the cycle has ended.**

⚠ **The use of tablets is only recommended for models which offer the MULTI-FUNCTIONAL TABLETS option.**

⚠ **To achieve the best results from each washing and drying cycle, powder detergent, rinse aid liquid and salt should be used.**

Compartment A: Washing detergent
Compartment B: Pre-wash detergent

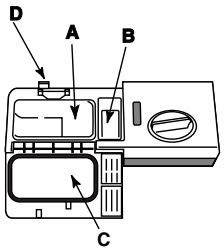

1. Open cover C by pressing button D.
2. Pour in the detergent after consulting the *Table of wash cycles*:
• For powder detergent use compartments A and B.
• For detergent in tablet form: when the cycle requires 1 tablet, place it in compartment A and close the cover; when it requires 2, place the second tablet at the bottom of the appliance.
3. Remove detergent residues from the edges of the compartment and close the cover until it clicks.

* Only available in selected models.

Wash cycles

Hotpoint ARISTON

EN

⚠ **If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly.**

⚠ **The number and type of wash cycles and options may vary depending on the dishwasher model.**

Wash cycle selection instructions	Wash cycle	Detergent (A) = compartment A (B) = compartment B			Wash cycles which include drying	Wash cycle duration (tolerance ±10%) Hrs. Min.
		Powder	Liquid	Tablets		
Heavily soiled dishes and pans (not to be used for delicate items).	Intensive	30 g (A)	30 ml (A)	1 (A)	Yes	2:15’
Normally soiled pans and dishes. Standard daily wash cycle.	Normal	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Yes	1:45’
Environmentally-friendly wash cycle with low energy consumption levels, suitable for pans and dishes.	Eco*	25 g (A) 5 g (B)	25 ml (A) 5 ml (B)	1 (A)	Yes	2:20’

Notes:

To make it easier to measure out the detergent, it is worth remembering that:
1 tablespoon = 15 gr. of powder = approximately 15 ml of liquid - 1 teaspoon = 5 gr. of powder = approximately 5 ml of liquid

* The Eco wash cycle adheres to the regulation EN-50242. Although it has a longer duration than other wash cycles it uses less energy and is les harmful to the environment.

Note for Test Laboratories: for information relating to comparative EN testing conditions, please send an email to the following address: ASSISTENZA_EN_LVS@indesitcompany.com

Rinse aid and refined salt

EN

⚠ Only use products which have been specifically designed for dishwashers.
Do not use table salt or industrial salt, or washing up liquid.
Follow the instructions given on the packaging.

⚠ If using a multi-functional product it is not necessary to add rinse aid; however, **we recommend that you add salt, especially if you live in an area where the water is hard or very hard.** Follow the instructions given on the packaging.

⚠ If you do not add salt or rinse aid, the LOW SALT* and LOW RINSE AID* indicator lights remain lit.

Measuring out the rinse aid

Rinse aid makes it easier for the crockery to dry, as water runs off surfaces more readily and therefore does not leave streaks or marks.
The rinse aid dispenser should be filled:
• When the LOW RINSE AID* indicator light on the control panel is illuminated;

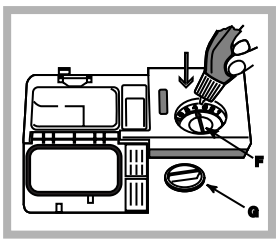

1. Open the dispenser by turning the lid (G) in an anticlockwise direction.
2. Pour in the rinse aid, making sure it does not overflow from the dispenser. If this happens, clean the spill immediately with a dry cloth.
3. Screw the lid back on.

NEVER pour the rinse aid directly into the appliance tub.

Adjusting the amount of rinse aid

If you are not completely satisfied with the drying results, you may adjust the quantity of rinse aid used. Use a screwdriver to turn the dosage adjuster (F) to one of the 6 pre-set positions (the default position is set to 4):
• If there are streaks on the crockery, set the adjustment device to a lower number (1-3).
• If drops of water remain on the crockery or if there are limescale marks present after the cycle has finished, set the adjuster to a higher number (4-6).

Setting the water hardness

Every dishwasher is equipped with a water softener which, by using refined salt designed especially for this type of appliance, supplies water without limescale which is then used to wash the crockery.

This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the water hardness level in your area. This information can be obtained from the organisation which supplies your household with water.

- Switch the machine off using the ON/OFF button and open the door.
- Set the SELECT WASH CYCLE knob first to wash cycle 3, then to wash cycle 1, then to wash cycle 3 again.
- Press the ON/OFF button; the wash cycle phase indicator lights will flash. It is now possible to select the water hardness level. There is a water hardness level for every wash cycle:
E.g.: wash cycle 1, water hardness level 1
wash cycle 2, water hardness level 2, etc. etc., (up to a maximum of 5* levels).
(The default water softener setting is level 1).
- To exit the function, wait approximately 30 seconds or switch off the machine using the ON/OFF button.

Even if using multi-functional tablets, the salt dispenser should still be filled.

Water Hardness Table						
°dH		°fH		mmol/l		level
0	17	0	30	0	3	1
17	34	31	60	3.1	6	2
34	50	61	90	6.1	9	3*
For values between 0°f and 10°f, we do not recommend the use of salt.						
* this setting may cause a slight increase in the duration of the cycle.						

(°dH = hardness measured in German degrees - °f = hardness measured in French degrees - mmol/l = millimoles per litre)

Measuring out the refined salt

In order to achieve the best possible results using a wash cycle, make sure that the dispenser is never empty.
Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery.
The salt dispenser is located in the lower part of the dishwasher (*see Description*) and should be filled:
• When the green float* cannot be seen by simply looking at the cap of the salt dispenser.
• When the LOW SALT* indicator light on the control panel is illuminated;

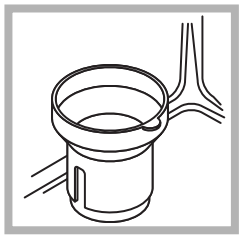

1. Remove the lower rack and unscrew the container cap (anticlockwise).
2. The first time you do this: fill the water tank right up to its edge.
3. Position the funnel* (*see figure)* and fill the salt container right up to its edge (this should hold approximately 1 kg); it is not unusual for a little water to leak out.
4. Remove the funnel* and wipe any salt residue away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four cracks which are arranged in a star shape on the lower part of the cap. (Salt cap with green float*)

It is advisable to perform this procedure every time you add salt to the container.
Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair).

⚠ When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed.

* Only available in selected models.

Care and maintenance

Hotpoint ARISTON

EN

Shutting off the water and electricity supplies

- Turn off the water tap after every wash cycle to avoid leaks.
- Always unplug the appliance when cleaning it and when performing maintenance work.

Cleaning the dishwasher

- The external surfaces of the machine and the control panel may be cleaned using a non-abrasive cloth which has been dampened with water. Do not use solvents or abrasive products.
- Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar.

Preventing unpleasant odours

- Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine.
- Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours.

Cleaning the sprayer arms

Food residue may become encrusted onto the sprayer arms and block the holes used to spray the water. It is therefore recommended that the arms are checked from time to time and cleaned with a small non-metallic brush.
The two sprayer arms may both be removed.

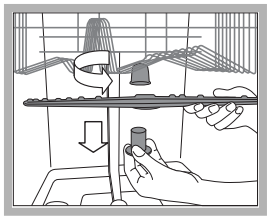

To remove the upper sprayer arm, rotate the locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced with the holes facing upwards.

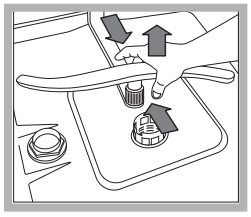

The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards.

Cleaning the water inlet filter*

If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher.

⚠ Clean the water inlet filter at the tap outlet regularly.
- Turn off the water tap.
- Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water.
- Replace the filter and screw the water hose back into position.

Cleaning the filters

The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They should be cleaned if you wish to achieve the best results in every wash.

⚠ Clean the filters regularly.

⚠ The dishwasher should not be used without filters, or if the filter is loose.

• After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below:
1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. 1).
2. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. 2).
3. Slide out the stainless steel plate filter A (fig. 3).
4. Inspect the trap and remove any food residue. NEVER REMOVE the wash cycle pump (black detail) *(fig. 4)*.

1

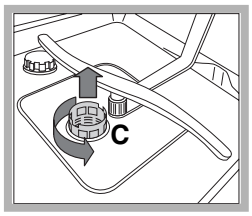

2

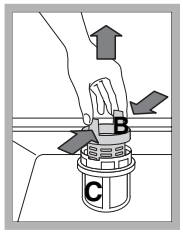

3

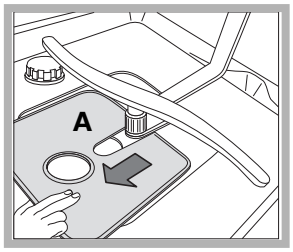

4

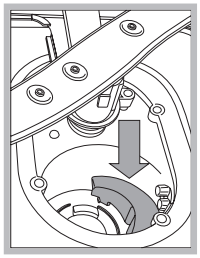

After cleaning the filters, replace the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher.

Leaving the machine unused for extended periods

- Disconnect the appliance from the electricity supply and shut off the water tap.
- Leave the door of the appliance ajar.
- When you return, run a wash cycle when the dishwasher is empty.

* Only available in selected models.

Precautions and advice

EN

⚠ This appliance was designed and manufactured in compliance with current international safety standards. The following information has been provided for safety reasons and should therefore be read carefully.

General safety

- The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use.
- The appliance must be used by adults only, to wash domestic crockery in accordance with the instructions in this manual.
- The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms.
- Do not touch the appliance when barefoot.
- When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable.
- The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning the appliance or carrying out any maintenance work.
- If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself.
- Never touch the heating element.
- Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn.
- The door should not be left open as it may create a dangerous obstacle.
- Keep detergent and rinse aid out of reach of children.
- The packaging material should not be used as a toy.

Disposal

- Disposal of packaging materials: observe local legislation so that the packaging may be reused.
- The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection.

  For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer.

Saving energy and respecting the environment

Saving water and energy

- Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (*see Wash cycles*).
- Select a wash cycle which is suited to the type of crockery and to the soil level of the crockery using the *Table of wash cycles*:
  - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels.
  - If the load is smaller than usual activate the Half load option* (*see Start-up and use*).
- If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied. The Delayed start* button (*see Start-up and use*) helps you organise the wash cycles accordingly.

Phosphate-free and chlorine-free detergents containing enzymes

- We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment.
- Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle.
- To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature.

* Only available in selected models.

Troubleshooting

Hotpoint ARISTON

EN

Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance.

Problem:	Possible causes / Solutions:
The dishwasher does not start.	• The plug has not been inserted into the electrical socket properly, or there is no power in the house. • The dishwasher door has not been shut properly. • A delayed start has been programmed (*see Start-up and use*).
No water drains out from the dishwasher.	• The dishwasher cycle has not yet finished. • The water inlet hose is bent (*see Installation*). • The drain duct is blocked. • The filter is clogged up with food residues.
The dishwasher makes excessive noise.	• The dishes are rattling against each other or against the sprayer arms. • An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers *(see Start-up and use).*
The dishes and glasses are covered in a white film or limescale deposits.	• The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (*see Rinse aid and salt*). • The lid on the salt dispenser is not closed properly. • The rinse aid has been used up or the dosage is too low. • The crockery is made from non-stick material.
The dishes and glasses are streaked or have a bluish tinge.	• The rinse aid dosage is too high.
The crockery has not been dried properly.	• A wash cycle without a drying programme has been selected. • The rinse aid has been used up or the dosage is too low (*see Rinse aid and salt*). • The rinse aid dispenser setting is not high enough.
The dishes are not clean.	• The racks are overloaded (*see Loading the racks*). • The crockery has not been arranged well. • The sprayer arms cannot move freely. • The wash cycle is too gentle (*see Wash cycles*). • An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers *(see Start-up and use).* • The lid on the rinse aid compartment has not been shut correctly. • The filter is dirty or blocked (*see Care and maintenance*). • The refined salt level is low (*see Rinse aid and salt*).
The dishwasher does not take any water in/Tap shut-off alarm (the Salt, Rinse Aid, Drying and End indicator lights flash).	• There is no water in the mains supply. • The water inlet hose is bent (see Installation). • Turn on the tap and the appliance will start after a few minutes. • The appliance is locked because no action was taken when the Salt and Rinse Aid indicator lights were flashing. Switch off the machine using the ON/OFF button, turn on the tap and switch the machine back on after 20 seconds by pressing the same button. Re-programme the machine and restart the wash cycle.
Water loading solenoid valve malfunction alarm (the Salt, Rinse Aid and Drying indicator lights flashes).	• Switch off the appliance by pressing the ON/OFF button and switch it back on after a minute. If the alarm continues, shut off the water tap to eliminate the risk of flooding, remove the plug from the electrical socket and contact Assistance.
Water inlet hose alarm/Water inlet filter blocked. (the Salt, Rinse Aid, Washing, Drying and End indicator lights flashes).	• Switch off the appliance by pressing the ON/OFF button. Shut off the water tap to eliminate the risk of flooding and remove the plug from the electrical socket. Make sure the water inlet filter has not become blocked by various impurities. (see “Care and maintenance” chapter).

Assistance

EN

Before contacting Assistance:

- Check whether the problem can be resolved using the Troubleshooting guide (*see Troubleshooting*).
- Restart the programme to check whether the problem has ceased to exist.
- If the problem persists, contact the Authorised Technical Assistance Service.

⚠ Never use the services of unauthorised technicians.

Please have the following information to hand:

- The type of malfunction.
- The appliance model (Mod.).
- The serial number (S/N).

This information can be found on the appliance data plate (*see Description of the appliance*).